

1



Enter/Exit Programming Mode

2



Good Read Beep Volume = Medium

3



Code 39 Start/Stop Character Transmission = Transmit

4



UPC-E to UPC-A = Expand

5



Pick Mode = Enable

6



Set AIM ID for GS1-128 = Disable

7



Enter/Exit Programming Mode

this will reset to defaults



Restore Custom Default Configuration